

Installation Guide

Controller Series E1030/E2030/E4030



Products

- E1030-DP
- E2030-DP
- E4030-DP

Content

IMPORTANT NOTES FOR E1030/E2030/E4030 SERIES CONTROLLERS.....	2
SYSTEM OVERVIEW	3
E1030 SERIES FUNCTION AND WIRING	4
POWER SUPPLY AND GROUNDING	5
DESCRIPTION OF THE CONNECTORS / INTERFACES.....	6
MECHANICAL DIMENSION.....	9
POWER SUPPLY REQUIREMENT	10
ORDERING INFORMATION	10
DECLARATION OF CONFORMITY CE-MARKING	11
ERROR CODES	12
CONTACT ADDRESSES.....	12

Important notes for E1030/E2030/E4030 series controllers**CAUTION !!**

In order to assure a safe and error free operation, and to avoid severe damage to system components, all system components must be directly attached to a single ground bus that is earth or utility grounded.



Each system component should be tied directly to the ground bus (star pattern), rather than daisy chaining from component to component. (LinMot motors are properly grounded through their power cables when connected to LinMot controllers.)



All connectors must not be connected or disconnected while DC voltage is present. Do not disconnect system components until all LinMot controller LED's have turned off. (Capacitors in the power supply may not fully discharge for several minutes after input voltage been disconnected). Failure to observe these precautions may result in severe damage to electronic components in LinMot motors and/or controllers.



Do not switch Power Supply DC Voltage. All power supply switching and E-Stop breaks should be done to the AC supply voltage of the power supply.



Do not connect or disconnect the motors from controllers with voltage present. Wait to connect or disconnect motors until all LinMot controller LED's have turned off. (Capacitors may not fully discharge for several minutes after power has been turned off). Failure to observe these precautions may result in severe damage to electronic components in LinMot motors and/or controllers.

© 2004 NTI Ltd

This work is protected by copyright.


Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, microfilm, storing in an information retrieval system, not even for didactical use, or translating, in whole or in part, without the prior written consent of NTI AG.

LinMot® is a registered trademark of NTI AG.

Note


The information in this documentation reflects the stage of development at the time of press and is therefore without obligation. NTI AG. reserves itself the right to make changes at any time and without notice to reflect further technical advance or product improvement.

System Overview

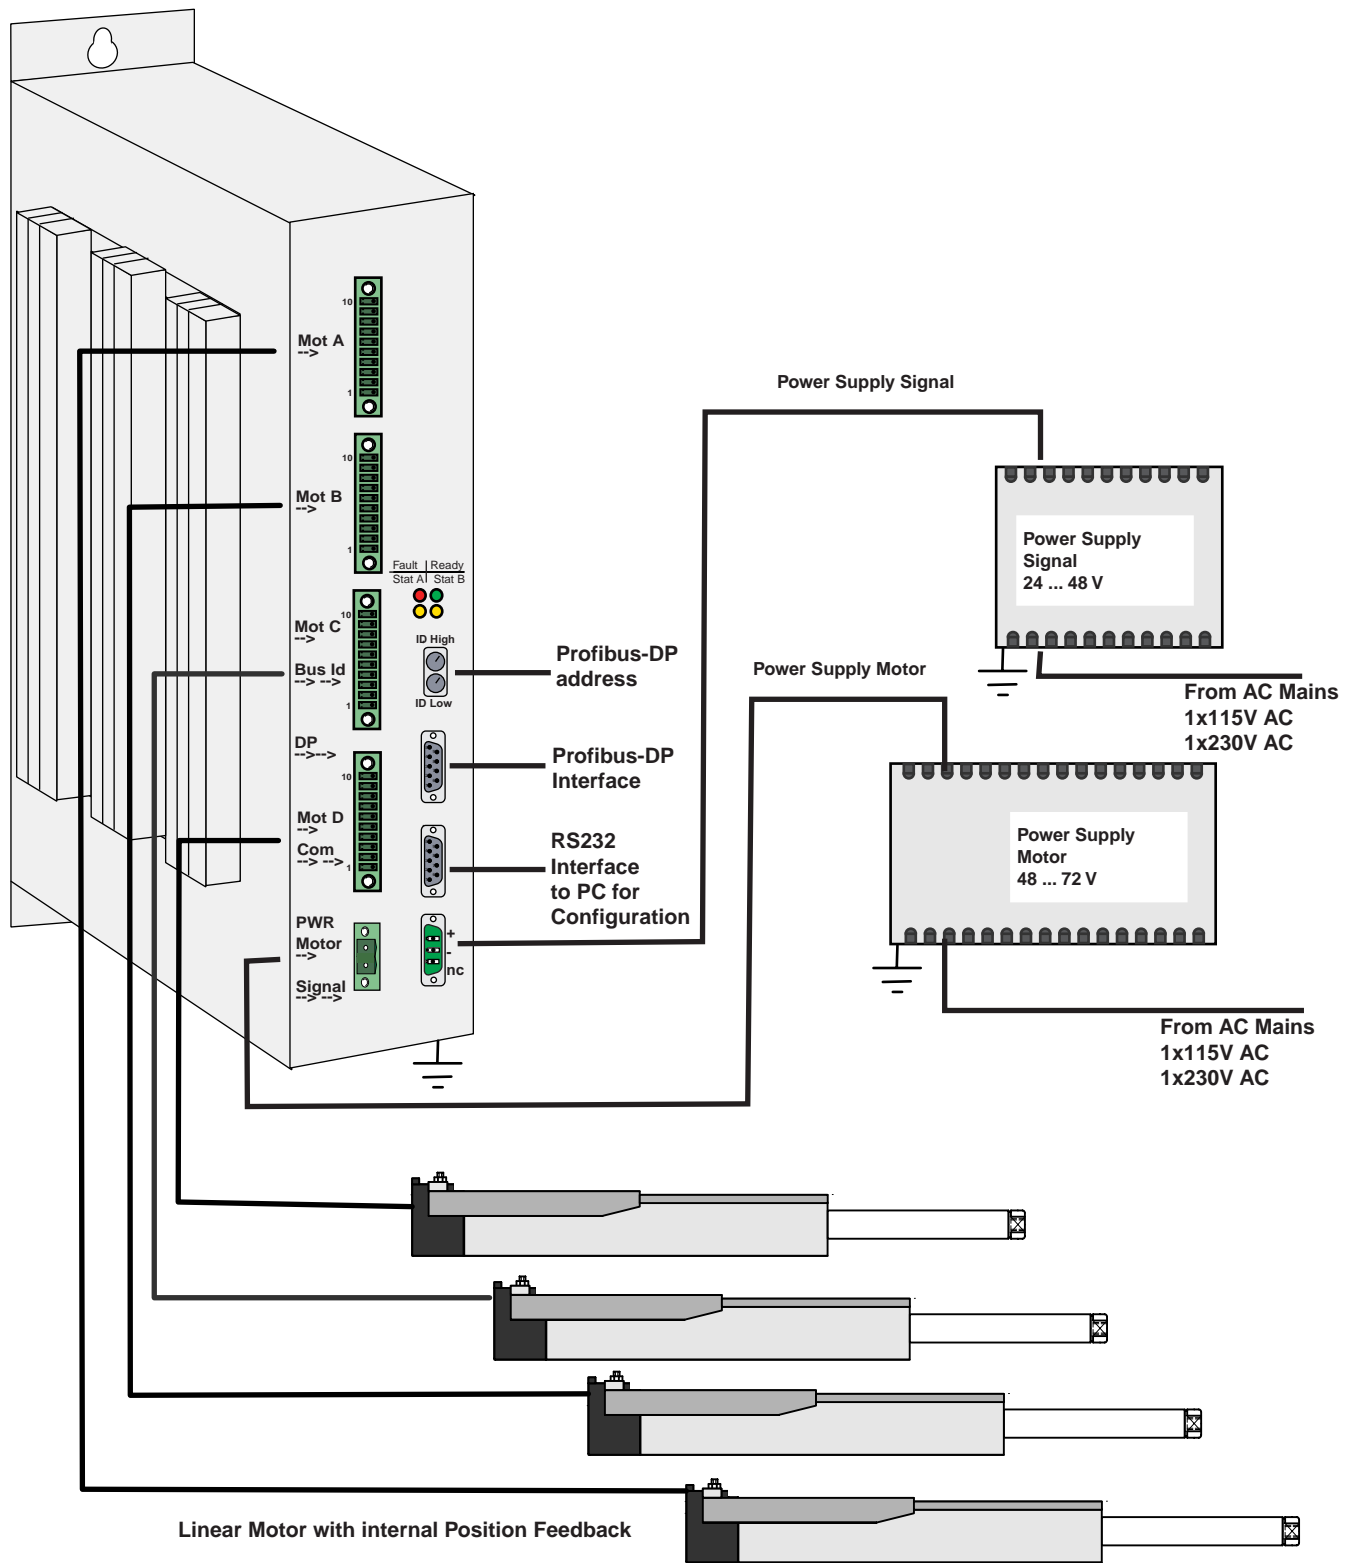


Complete E4030 Controller based system (E1030 and E2030 controllers will only drive one respectively two motors). Power Supply for Signal and Motor may be the same device (see later).

E1030 series Function and Wiring

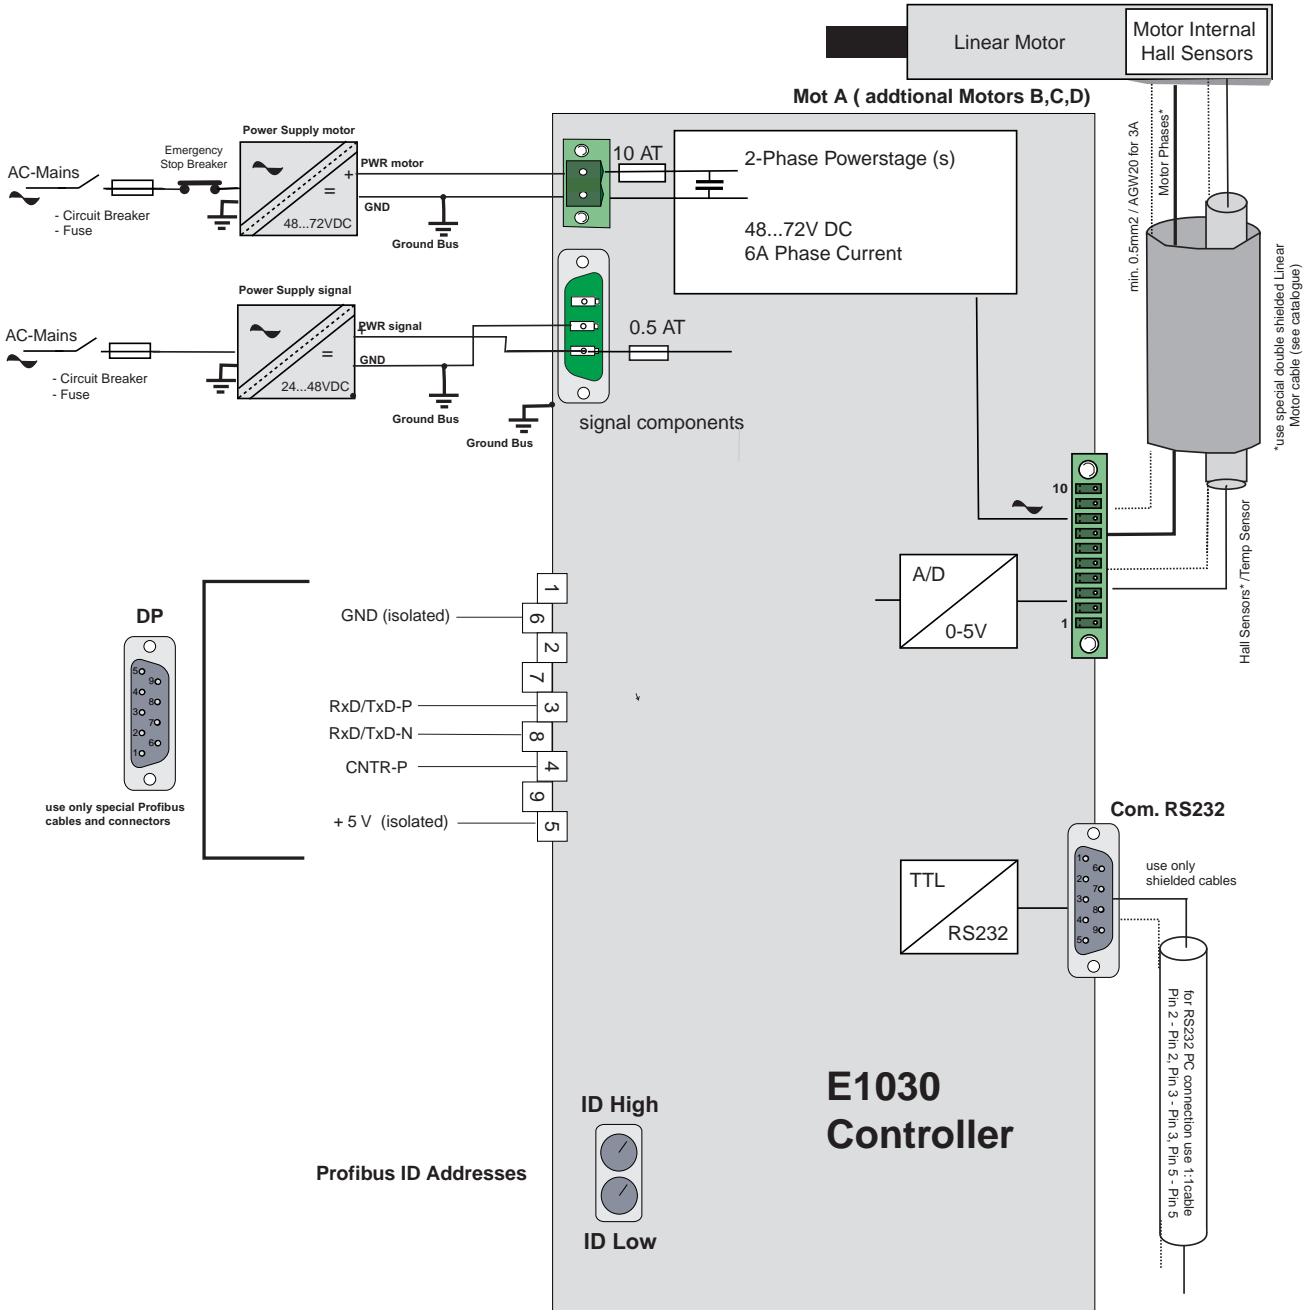

Picture shows typical wiring of a single axes controller. Multiple axes controller will have additional motor connectors.

Power Supply and Grounding

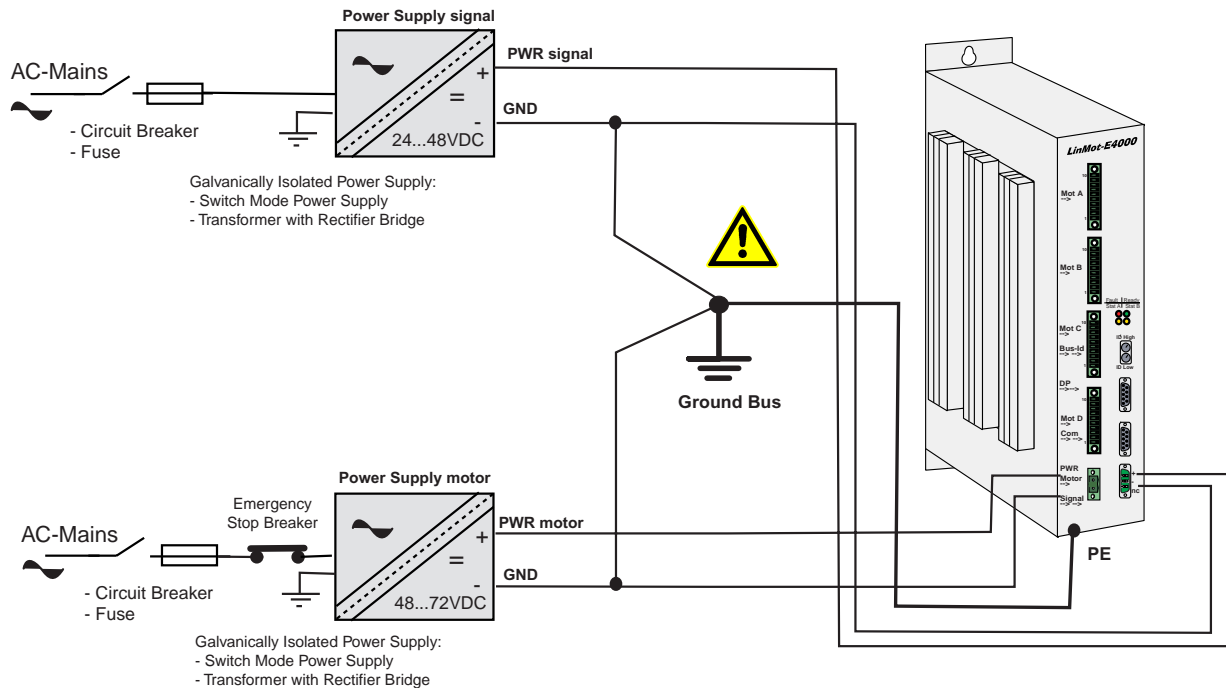

Instead of two separated power supplies it may be possible to use only one power supply of 48V if there is no need to control the signal power supply (logical devices of the controller) and the power supply of the powerstage for the motors independently (see safety rules of the application).



In order to assure a safe and error free operation, and to avoid severe damage to system components, **all system components must be well grounded to either a single earth or utility ground.** This includes both LinMot and all other control system components to the same ground bus.



Each system component should be tied directly to the ground bus (**star pattern**), rather than daisy chaining from component to component. (LinMot motors are properly grounded through their power cables when connected to LinMot controllers.)




Power supply connectors must not be connected or disconnected while DC voltage is present. Do not disconnect system components until all LinMot controller LED's have turned off. (Capacitors in the power supply may not fully discharge for several minutes after input voltage been disconnected). Failure to observe these precautions may result in severe damage to electronic components in LinMot motors and/or controllers.



Do not switch Power Supply DC Voltage. All power supply switching and E-Stop breaks should be done to the AC supply voltage of the power supply. Failure to observe these precautions may result in severe damage to controller.

Description of the connectors / Interfaces

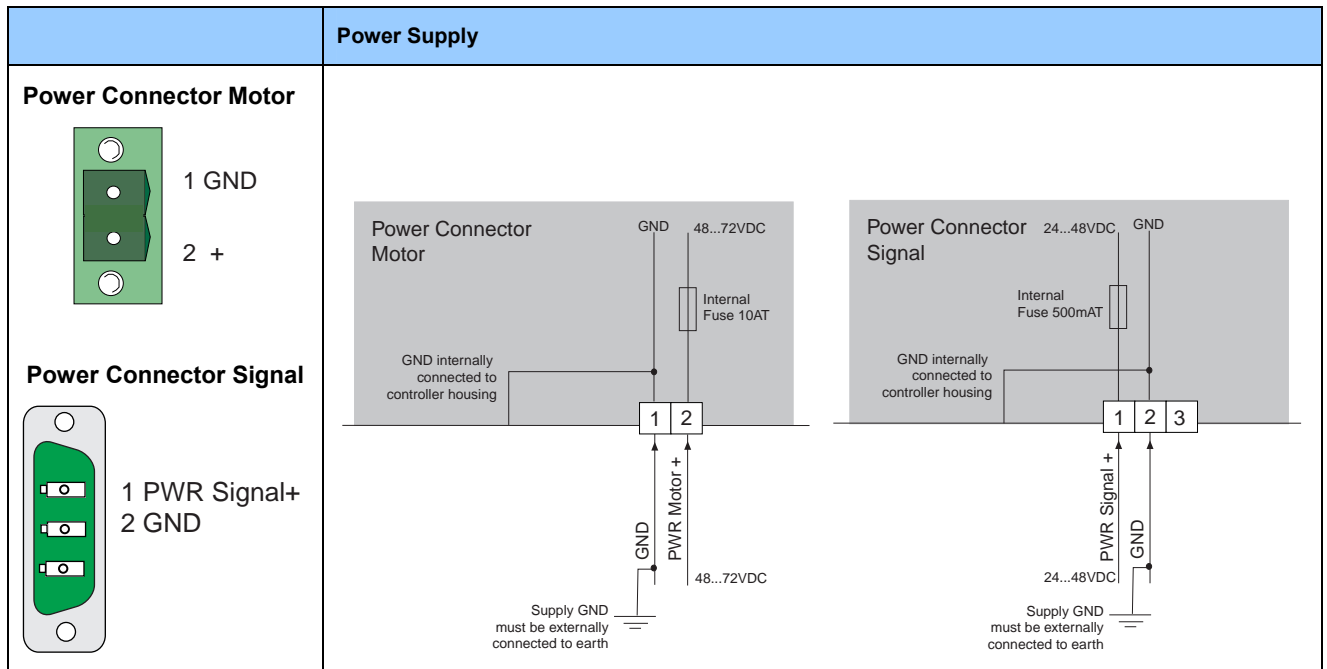

Power Supply Motor:

Wiring: 2.5 mm² (AWG12), max length 5 m
 Supply Voltage 48...72 VDC. Absolute max. Rating 72VDC + 5%
 Supply voltage for PWR Signal and PWR Motor may be different
 Motor Supply GND must be externally connected to earth

Power Supply Signal:


Wiring: 1.5 mm² (AWG16), max length 5 m
 Supply Voltage 24...48VDC. Absolute max. Rating 48VDC + 10%
 Supply voltage for PWR Signal and PWR Motor may be different
 Motor Supply GND must be externally connected to earth



Caution:

By exceeding 53VDC Power Supply Signal, the controller will go into error state, voltage higher than 55 VDC will damage the controller!
 By exceeding 76 VDC Motor Supply Signal, the controller will go into error state, voltage higher than 79 VDC will damage the controller!
 Do not switch Power Supply DC Voltage. All power supply switching and E-Stop breaks should be done to the AC supply voltage of the power supplies
 Power supply connectors must not be connected or disconnected while DC voltage is present.

LED	State Display		
	Ready Green	READY	The system has started correctly
	Stat A Yellow	STAT A	Coding for the actual operating state
	Stat B Yellow	STAT B	Coding for the actual operating state
	The display of the various operating states is shown on the last page of this manual.		
Fault red	FAULT	An error has occurred	(In the state ERROR a blink code of the STAT LEDs A and B tells what the actual error is. The blink codes are explained in chapter 'Service' of the user Manual.)

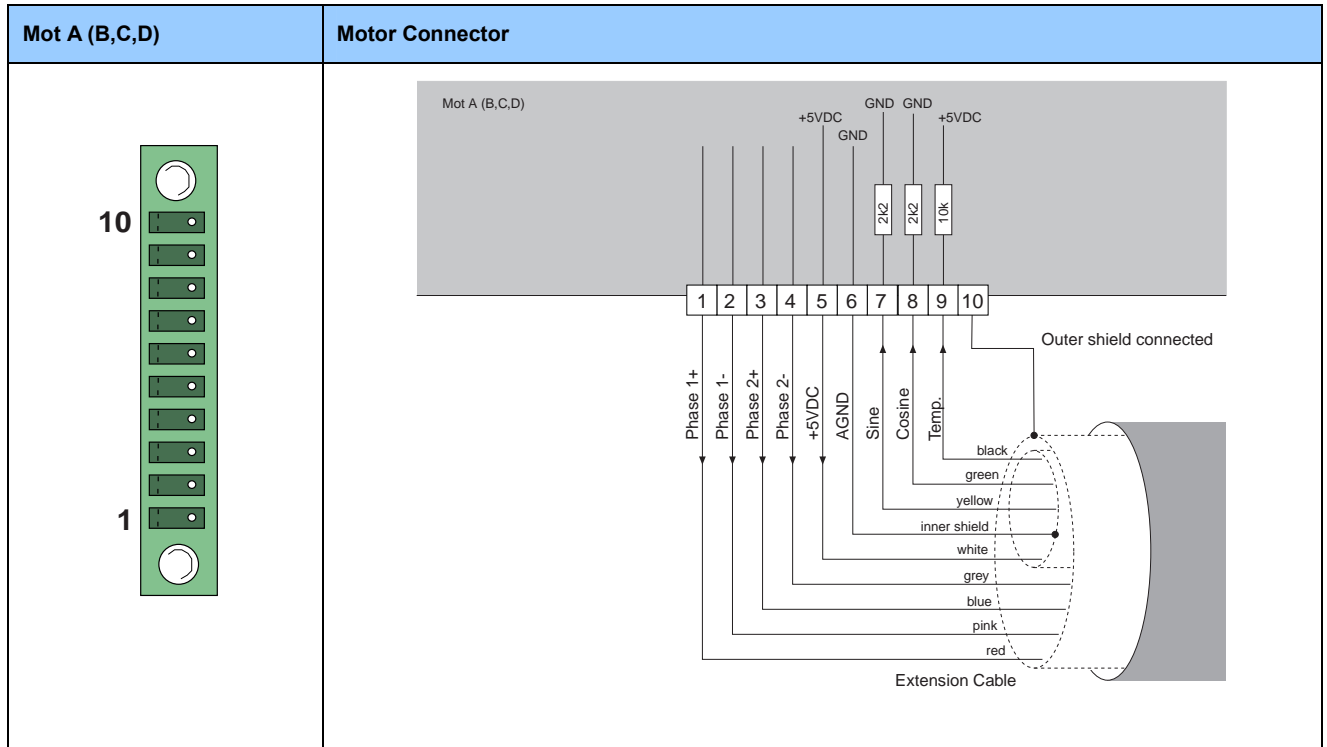

Note:

- Use only special double-shielded Linear Motor Cable (see datasheet 'extension cables')
- Use +5V (Pin 3) and AGND (Pin 6) only for motor internal Hall Sensor supply (max. 100mA).
- Do NOT connect AGND (Pin 6) to ground or earth!
- Inner shield (AGND) and outer shield (earth) must be isolated to each other.




Caution:



- Wrong Motor wiring may damage Linear Motors and/or Servo Controller.
- If you are assembling motor cables by your own, double check motor wiring carefully before power up.




Do not connect or disconnect the motors from controllers with voltage present. Wait to connect or disconnect motors until all LinMot controller LED's have turned off. (Capacitors may not fully discharge for several minutes after power has been turned off). Failure to observe these precautions may result in severe damage to electronic components in LinMot motors and/or controllers. Depending on the environment the outer shield of the motor cable should be directly connected to the control cabinet where the controller is built in to get the best emc results.

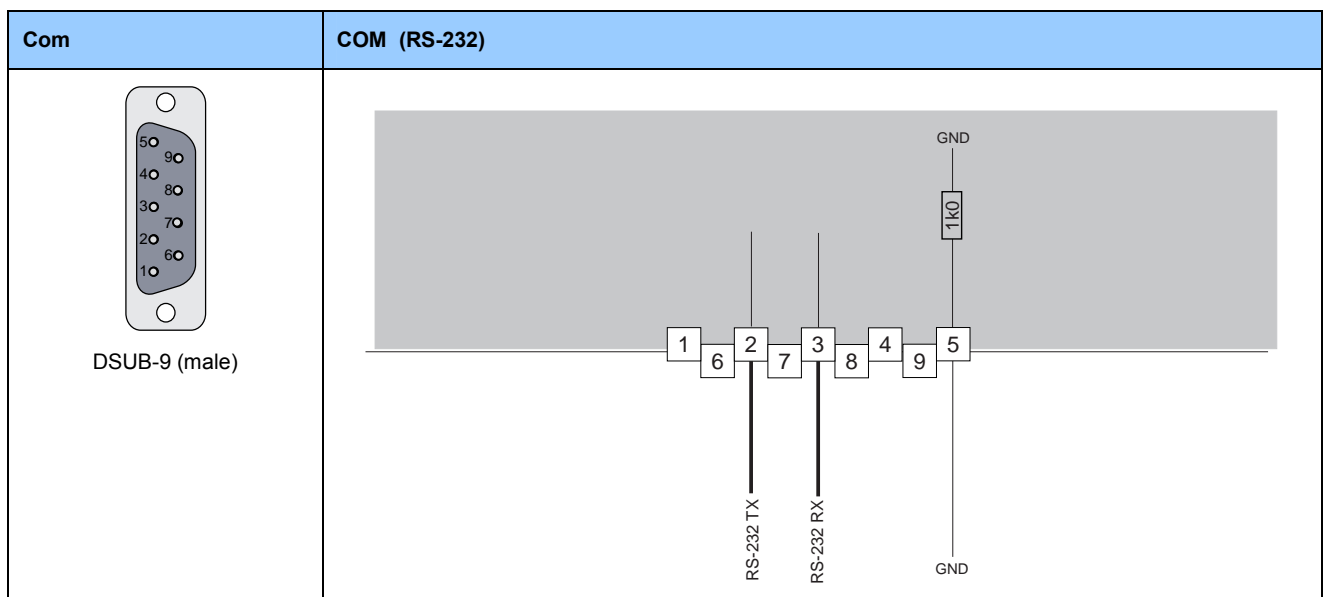

RS232: 9.6kBaud, use 1:1 connection cable to PC

 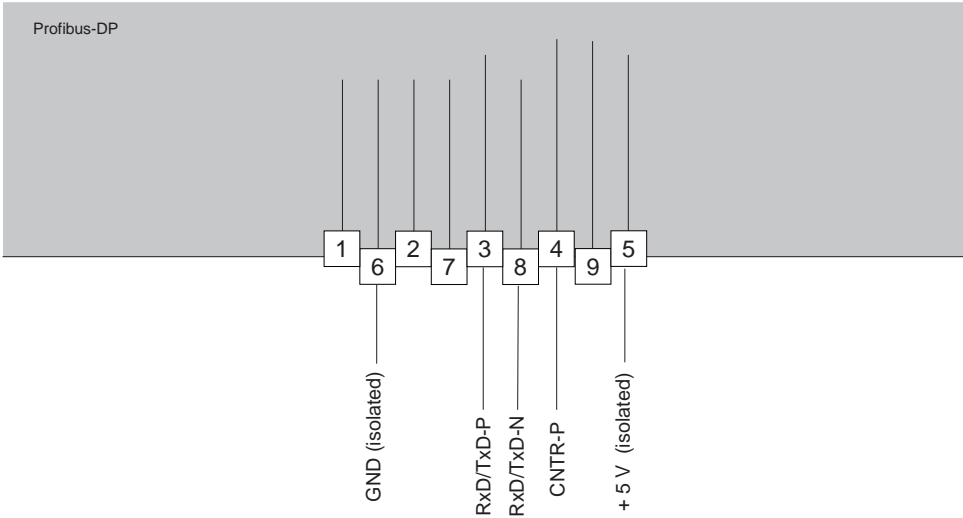DP	Profibus Connector
 <p>DSUB-15 (female)</p>	 <p>Profibus-DP</p> <p>1 6 2 7 3 8 4 9 5</p> <p>GND (isolated)</p> <p>RxD/TxD-P</p> <p>RxD/TxD-N</p> <p>CNTR-P</p> <p>+5 V (isolated)</p>

 
Isolated 5V output: max 50 mA

Profibus ID	
 <p>ID High</p> <p>ID Low</p>	


ID 1 : Profibus address high
 ID 2 : Profibus address low

Mechanical Dimension

Dimensions

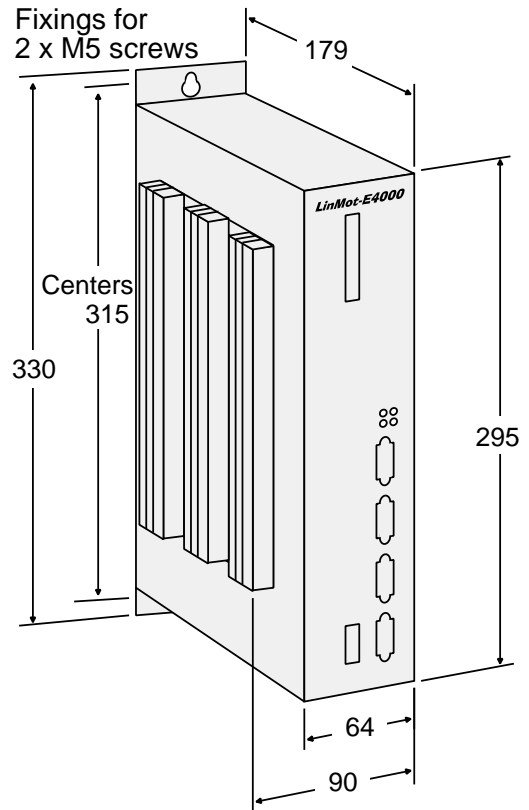

Recommended mounting for multiple controller installation

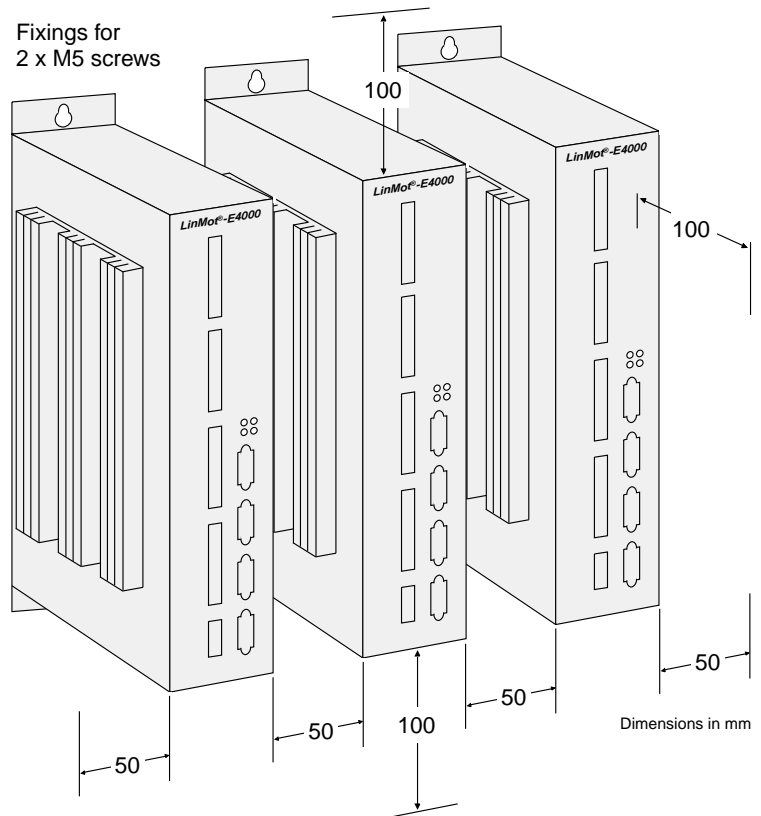

		E1030 <i>Single axes controller</i>	E2030 <i>2 axes controller</i>	E4030 <i>4 axes controller</i>
Width	mm (in)	90 (3.5)		
Height	mm (in)	330 (13)		
Height without fixings	mm (in)	295 (11.9)		
Depth	mm (in)	176 (7)		
Weight	Kg (lb)	2.5 (5.5)	2.6 (5.7)	2.7 (5.9)
Case	IP	40		
Storage Temperature	°C	-25...70		
Operating Temperature	°C	0...50		
Max. Case Temperature	°C	65		

Power Supply Requirement

Power Supply motor

The calculation of the needed power for the Motor supply is depending on the application and the used motor(s). The following table shows a recommendation for general applications.

Controller		Voltage/ Power	LinMot Switched- Power Supply	Part-Nr.
E1000	1 motor	72 V / 300 W	S01-72/300	0150-1942
E2000	Up to 2 motors	72 V / 600 W	S01-72/600	0150-1943
E4000	Up to 4 motors	72 V / 600 W	S01-72/600	0150-1943

Power Supply signal

24 ... 48 V / 10 W

Regeneration of Power

The Exxxx controller don't use a regeneration resistor. In most application the recuperated energy will not become an issue. In cases where the motor power supply voltage will exceeds the voltage limits because of recuperation an additional capacitor between 'PWR motor' and 'GND' should be used. Typical: 22'000 uF.

Ordering Information

Servo Controller	Description	Art. No.
E1030-DP	Profibus DP Controller 1 Axis (72V/6A)	0150-1625
E2030-DP	Profibus DP Controller 2 Axis (72V/6A)	0150-1626
E4030-DP	Profibus DP Controller 4 Axis (72V/6A)	0150-1628

Declaration of Conformity CE-Marking

Manufacturer: NTI AG
 LinMot®
 Technoparkstrasse 1
 8005 Zurich
 Switzerland
 Tel.: +41 (0) 1 445 22 82
 Fax: +41 (0) 1 445 22 81

Products: LinMot® Controllers

Type	Art.-No.	Type	Art.-No.	Type	Art.-No.
E1030-DP	0150-1625				
E2030-DP	0150-1626				
E4030-DP	0150-1628				

The product must be mounted and used in strict accordance with the installation instruction contained within the User's Manual, a copy of which may be obtained from NTI Ltd.

I declare that as the authorized representative, the above information in relation to the supply/manufacture of this product is in conformity with the stated standards and other related documents in compliance with the protection requirements of the EMC Directive (89/336/EEC) and is marked in accordance with the CE Marking Directive (93/68/EEC).

Standards Complied with:

EMI	EN 55011	Class A
EN 61000-6-4		
Electromagnetic	EN 61000-4-2	4 kV / 8kV
Susceptibility EMC	EN 61000-4-4	1 kV / 2kV
EN 61000-6-2	EN 61000-4-3	10 V/m
	EN 61000-4-6	10 V
	ENV 50204	10 V/m

Company
 NTI Ltd.

Zürich, February 24, 2003

 R. Rohner / CEO NTI Ltd.

Error codes

Error display When an error occurs it is displayed by means of the blinking of at least one of the four LEDs on the front of the servo controller.

Ready LED The Ready LED is ON as soon as the supply voltage for the processor is guaranteed and the system has started up correctly. Communication with the PC over the serial interface is only possible when this LED is ON.

The following table summarizes the blink codes and their meaning:

LED			Description	
Fault	Stat A	Stat B		
● ~ 3Hz	off	off	HW system error: Hardware error in the servo controller.	
2x ● ~ 1Hz			SW1 System error: Software error in the servo controller. The system software wasn't loaded successfully.	
● ~ 1Hz			SW2 System error: Software error in the servo controller. The system software wasn't loaded successfully.	
On	● ~ 2Hz	● ~ 2Hz	Generic fault: The exact error message may be displayed with the error inspector.	
On	■	2x ●	The supply voltage for the Power circuitry is too low.	
		3x ●	The supply voltage for the Power circuitry is too high.	
		4x ●	The supply voltage for the Signal circuitry is too low.	
		5x ●	The supply voltage for the Signal circuitry is too high.	
		6x ●	The servo controller is too hot.	
			8x ●	Application Software Error (see Manual)
	1x ●: Mot A	1x ●	The motor is overloaded.	
	2x ●: Mot B	2x ●	The motor is too hot.	
	3x ●: Mot C	3x ●	Following error.	
	4x ●: Mot D	4x ●	The slider is missing from the motor.	
		6x ●	The initialization was not completed successfully.	
		7x ●	Incorrect motor type configured or damaged motor.	
		8x ●	A referenced motion profile for a motor is missing. Selected motion profile not valid for actual drive type.	

on LED is ON
off LED is OFF

● LED blinks shortly (ca. 1/4s)
■ LED blinks longer (ca. 1/2s)

Contact Addresses

NTI AG

LinMot
Technoparkstr. 1
CH-8005 Zürich
Schweizerland

Tel. +41 (0)1 445 22 82 or +41 848 546 668
Fax. +41 (0)1 445 22 81
email: office@LinMot.com
Web: www.LinMot.com

LinMot Inc.

N2444 Broad Street
Delavan
WI 53115
USA

Phone +1-877-546-3270 or 262-728-2699
Fax: +1-800-463-8708 or 262-740-0141
email: officeUS@LinMot.com
Web: www.LinMot.com