

# CONTENTS

---

<b>INTRODUCTION</b> . . . . .	<b>1-1</b>
Setup and Programming . . . . .	1-4
Products . . . . .	1-5
System Building . . . . .	1-12
System Examples . . . . .	1-13
Features and Typical Applications . . . . .	1-16
The Trio Motion Technology Website . . . . .	1-17
<b>HARDWARE OVERVIEW</b> . . . . .	<b>2-1</b>
<i>Motion Coordinator</i> MC302X . . . . .	2-2
Connections to the MC302X . . . . .	2-2
MC302X - Feature Summary . . . . .	2-9
<i>Motion Coordinator</i> Euro205x . . . . .	2-10
Axis Configuration . . . . .	2-11
Connections to the Euro 205x . . . . .	2-12
Euro 205x Backplane Connector . . . . .	2-13
Euro205x - Feature Summary . . . . .	2-19
<i>Motion Coordinator</i> Euro209 . . . . .	2-20
Axis Configuration . . . . .	2-21
Connections to the Euro 209 . . . . .	2-22
Euro 209 Backplane Connector . . . . .	2-23
Euro209 - Feature Summary . . . . .	2-28
<i>Motion Coordinator</i> MC206X . . . . .	2-29
Connections to the MC206X . . . . .	2-31
Amplifier Enable (Watchdog) Relay Output . . . . .	2-34
Reference Encoder Input . . . . .	2-35
Universal Serial Bus . . . . .	2-35
MC206X - Stepper Outputs / Encoder Inputs . . . . .	2-36
MC206X - Feature Summary . . . . .	2-37
Motion Coordinator MC224 . . . . .	2-39
Connections to the MC224 . . . . .	2-41
MC224 - Feature Summary . . . . .	2-46
<b>INSTALLATION</b> . . . . .	<b>3-1</b>
<i>Motion Coordinator</i> MC302X . . . . .	3-3
<i>Motion Coordinator</i> Euro 205x . . . . .	3-5
<i>Motion Coordinator</i> Euro 209 . . . . .	3-6
<i>Motion Coordinator</i> MC206X . . . . .	3-7
<i>Motion Coordinator</i> MC224 . . . . .	3-8

EMC Considerations . . . . .	3-10
Installation Requirements to Ensure Conformance . . . . .	3-12
<i>Motion Coordinator</i> MC302X . . . . .	3-12
<i>Motion Coordinator</i> Euro205x . . . . .	3-12
<i>Motion Coordinator</i> Euro209 . . . . .	3-13
<i>Motion Coordinator</i> MC206X . . . . .	3-14
<i>Motion Coordinator</i> MC224 . . . . .	3-14
<b>DAUGHTER BOARDS . . . . .</b>	<b>4-1</b>
Fitting and Handling Daughter Boards . . . . .	4-4
MC224 + Axis Expander Slot Sequence . . . . .	4-6
Fitting Daughter Boards to the Euro205x and Euro209 . . . . .	4-7
Fitting Daughter Boards to the MC206X . . . . .	4-9
Enhanced Servo Encoder Daughter Board . . . . .	4-11
Servo Encoder Daughter Board . . . . .	4-14
Servo Resolver Daughter Board . . . . .	4-15
Reference Encoder Daughter Board . . . . .	4-17
Analogue Input Daughter Board . . . . .	4-19
Stepper Daughter Board . . . . .	4-20
Stepper Encoder Daughter . . . . .	4-22
Hardware PSWITCH Daughter Board . . . . .	4-24
Analogue Output Daughter Board . . . . .	4-25
SSI Servo Encoder Daughter Board . . . . .	4-26
Differential Stepper Daughter Board . . . . .	4-29
CAN Daughter Board . . . . .	4-31
Enhanced CAN Daughter Board . . . . .	4-32
SERCOS Daughter Board . . . . .	4-33
SLM Daughter Board . . . . .	4-34
USB Daughter Board . . . . .	4-36
Ethernet Daughter Board . . . . .	4-37
Profibus Daughter Board . . . . .	4-38
Ethernet IP Daughter Board . . . . .	4-39
<b>EXPANSION MODULES . . . . .</b>	<b>5-1</b>
Input/Output Modules . . . . .	5-3
CAN 16-I/O Module (P316) . . . . .	5-3
CAN Analog Inputs Module (P325) . . . . .	5-12
Operator Interfaces . . . . .	5-16
Membrane Keypad (P503) . . . . .	5-17
Mini-Membrane Keypad (P502) . . . . .	5-20
Programming the Membrane Keypad . . . . .	5-21
Keypad KEY ON - KEY OFF Mode . . . . .	5-25

FO-VFKB Fibre Optic Keypad/Display Interface (p504)	5-26
Serial to Fibre-Optic Adapter (P435)	5-28
SD Card Adaptor (P396)	5-29
<b>SYSTEM SETUP AND DIAGNOSTICS</b>	<b>6-1</b>
Preliminary Concepts	6-3
System Setup	6-3
Preliminary checks	6-4
Checking Communications and System Configuration	6-4
Input/Output Connections	6-6
Setting Servo Gains	6-8
Proportional Gain	6-10
Integral gain	6-10
Derivative gain	6-10
Output Velocity Gain	6-11
Velocity Feed Forward Gain	6-11
Diagnostic Checklists	6-13
<b>PROGRAMMING</b>	<b>7-1</b>
What is a program?	7-3
Sequence	7-4
Selection	7-5
Iteration	7-5
Controller Functions	7-7
Identifiers	7-7
Expressions	7-8
Parameters	7-10
Command Line Interface	7-14
<b>TRIO BASIC COMMANDS</b>	<b>8-1</b>
Motion and Axis Commands	8-13
Input / Output Commands	8-92
Program Loops and Structures	8-118
System Parameters and Commands	8-128
Mathematical Operations and Commands	8-207
Constants	8-229
Axis Parameters	8-231
<b>PROGRAMMING EXAMPLES</b>	<b>9-1</b>
Example Programs	9-3
<b>SUPPORT SOFTWARE</b>	<b>10-1</b>
<i>Motion</i> Perfect 2	10-3
System Requirements:	10-4

Connecting <i>Motion</i> Perfect to a controller . . . . .	10-5
<i>Motion</i> Perfect 2 Projects . . . . .	10-6
Project Check Window . . . . .	10-6
Project Check Options . . . . .	10-7
The <i>Motion</i> Perfect Desktop . . . . .	10-10
Main Menu . . . . .	10-11
Controller Menu . . . . .	10-12
Controller Configuration . . . . .	10-14
CAN I/O Status . . . . .	10-15
Ethernet Configuration . . . . .	10-16
Feature Enable . . . . .	10-17
Flashstick support . . . . .	10-19
Memory Card Support . . . . .	10-20
Loading New System Software . . . . .	10-21
Lock / Unlock . . . . .	10-23
<i>Motion</i> Perfect Tools . . . . .	10-24
Terminal . . . . .	10-25
Axis Parameters . . . . .	10-26
Oscilloscope . . . . .	10-29
Keypad Emulation . . . . .	10-38
Table / VR Editor . . . . .	10-40
Jog Axes . . . . .	10-41
Digital IO Status . . . . .	10-44
Analogue Input Viewer . . . . .	10-46
Linking to External Tools . . . . .	10-47
Control Panel . . . . .	10-49
Creating and Running a program . . . . .	10-54
The <i>Motion</i> Perfect Editor . . . . .	10-55
Editor Menus . . . . .	10-58
Program Debugger . . . . .	10-61
Running Programs . . . . .	10-64
Making programs run automatically . . . . .	10-66
Set Powerup Mode . . . . .	10-66
Storing Programs in the Flash EPROM . . . . .	10-67
Configuring The <i>Motion</i> Perfect 2 Desktop . . . . .	10-68
Communications . . . . .	10-68
Editor Options . . . . .	10-71
General Options . . . . .	10-71
CAN Drive Options . . . . .	10-72
Diagnostics . . . . .	10-72
Terminal Font . . . . .	10-72

Program Compare . . . . .	10-73
CX-Drive Configuration . . . . .	10-73
FINS Configuration . . . . .	10-73
Saving the Desktop Layout . . . . .	10-73
Running <i>Motion</i> Perfect 2 Without a Controller . . . . .	10-75
MC Simulation . . . . .	10-75
Project Encryptor . . . . .	10-79
Introduction . . . . .	10-79
Encryption Process . . . . .	10-79
Encrypting a Project . . . . .	10-79
CAD2Motion . . . . .	10-83
DocMaker . . . . .	10-84
<b>AUTO LOADER AND MC LOADER ACTIVEX . . . . .</b>	<b>11-1</b>
Project Autoloader . . . . .	11-3
Files . . . . .	11-4
Running the program . . . . .	11-5
Script Commands . . . . .	11-6
Script File . . . . .	11-15
MC Loader . . . . .	11-16
Installation of the MC Loader Component . . . . .	11-16
Properties . . . . .	11-17
Methods . . . . .	11-23
<b>USING THE PC MOTION ACTIVEX CONTROL . . . . .</b>	<b>12-1</b>
Introduction . . . . .	12-3
Requirements . . . . .	12-3
Installation of the ActiveX Component . . . . .	12-3
Using the Component . . . . .	12-3
Connection Commands . . . . .	12-4
Properties . . . . .	12-8
Motion Commands . . . . .	12-10
Process Control Commands . . . . .	12-19
Variable Commands . . . . .	12-20
Input / Output Commands . . . . .	12-23
General commands . . . . .	12-29
Events . . . . .	12-31
TrioPC status . . . . .	12-32
<b>COMMUNICATIONS PROTOCOLS . . . . .</b>	<b>13-1</b>
MODBUS RTU . . . . .	13-3
Introduction . . . . .	13-3

Initialisation and Set-up . . . . .	13-3
Modbus Technical Reference . . . . .	13-4
Glossary . . . . .	13-7
Profibus . . . . .	13-8
Installation and Set-up . . . . .	13-8
DeviceNet . . . . .	13-13
Installation and Set-up . . . . .	13-13
DeviceNet Information . . . . .	13-13
Connection Types Implemented . . . . .	13-14
DeviceNet Objects Implemented . . . . .	13-14
MC Object . . . . .	13-20
DeviceNet Status LEDs . . . . .	13-25
Ethernet . . . . .	13-26
Default IP Address . . . . .	13-26
The Subnet Mask . . . . .	13-27
Connecting to the Trio Ethernet Daughter Board . . . . .	13-28
<b>FIBRE-OPTIC NETWORK . . . . .</b>	<b>14-1</b>
General Description . . . . .	14-3
Connection of Network . . . . .	14-4
Network Programming . . . . .	14-6
Examples of network programming . . . . .	14-8
Network Specification . . . . .	14-12
<b>REFERENCE . . . . .</b>	<b>1-1</b>
ATYPE . . . . .	1-3
COMMSTYPE . . . . .	1-5
CONTROL . . . . .	1-8
Communications Ports . . . . .	1-8
Communications Errors . . . . .	1-9
Error Types . . . . .	1-10
MTYPE . . . . .	1-14
NETSTAT . . . . .	1-15
Data Formats and Floating-Point Operations . . . . .	1-16
Single-Precision Floating Point Format . . . . .	1-16
Product Codes . . . . .	1-17