

CONTENTS

INTRODUCTION	1-1
Setup and Programming	1-4
Products	1-5
System Examples	1-6
Features and Typical Applications	1-9
The Trio Motion Technology Website	1-10
HARDWARE OVERVIEW	2-1
<i>Motion Coordinator</i> PCI 208 - Product Code P180	2-3
PCI 208 Block Diagram	2-4
PCI 208 Backplate Connector :	2-10
INSTALLATION	3-1
<i>Motion Coordinator</i> PCI 208	3-3
EMC Considerations	3-4
Installation Requirements to Ensure Conformance	3-6
<i>Motion Coordinator</i> PCI 208 and options	3-6
AXIS CONFIGURATION	4-1
Axis Configuration on Power Up	4-3
Changing Axis ATYPES After Power Up	4-4
P184/P185 DAC Modules	4-5
P184/P185 Module Insertion	4-6
I/O MODULES	5-1
Input/Output Modules	5-3
CAN 16-I/O Module (P315)	5-3
DIP Switch Settings	5-6
TRIO Protocol	5-6
DUAL IO Mapping:	5-7
LED Indicators	5-7
CAN Analog Inputs Module (P325)	5-11
SYSTEM SETUP AND DIAGNOSTICS	6-1
Preliminary Concepts:	6-3
System Setup	6-3

Preliminary checks	6-4
Checking Communications and System Configuration	6-5
Input/Output Connections:	6-7
Setting Servo Gains	6-9
Proportional Gain	6-11
Integral Gain	6-11
Derivative Gain	6-11
Output Velocity Gain	6-12
Velocity Feed Forward Gain	6-12
Diagnostic Checklists	6-14
ACTIVE X PROGRAM EXAMPLES	7-1
Programming Example:	7-3
Configuring Visual BASIC	7-3
Building the application	7-3
Main Form - Code	7-5
Program Code	7-9
TRIO BASIC COMMANDS	8-1
Motion and Axis Commands	8-10
Input / Output Commands	8-44
Program Loops and Structures	8-65
System Parameters and Commands	8-78
Process Parameters and Commands	8-127
Mathematical Operations and Commands	8-131
Constants	8-148
Axis Parameters	8-150
TRIO BASIC PROGRAMMING EXAMPLES	9-1
Example Programs	9-3
SUPPORT SOFTWARE	10-1
<i>Motion Perfect 2</i>	10-3
System Requirements:	10-4
New Features for <i>Motion Perfect 1</i> Users	10-6
Connecting <i>Motion Perfect</i> to a controller	10-7
<i>Motion Perfect 2</i> Projects	10-8
The Project Check Window	10-8
Project Check Options	10-9
The <i>Motion Perfect</i> Desktop	10-12
Main Menu	10-13

Controller Menu	10-14
Controller Configuration	10-15
Feature Enable	10-16
Loading New System Software	10-18
Flashstick support	10-20
Lock / Unlock	10-21
<i>Motion Perfect Tools</i>	10-22
Terminal	10-23
Axis Parameters	10-24
Oscilloscope	10-27
Keypad Emulation	10-37
Table / VR Editor	10-39
Jog Axes	10-40
Digital IO Status	10-44
Analogue Input Viewer	10-46
Linking to External Tools	10-47
Control Panel	10-49
Creating and Running a program	10-54
The <i>Motion Perfect</i> Editor	10-55
Editor Menus	10-58
Program Debugger	10-60
Running Programs	10-63
Making programs run automatically	10-64
Set Powerup Mode	10-64
Storing Programs in the Flash EPROM	10-65
Configuring The <i>Motion Perfect 2</i> Desktop	10-66
Communications	10-66
Changing Comms Port Parameters	10-67
Editor Options	10-69
General Options	10-69
Saving the Desktop Layout	10-70
Running <i>Motion Perfect 2</i> Without a Controller	10-71
MC Simulation	10-71
CAD2Motion	10-74
DocMaker	10-75
Project Autoloader	10-76
Files	10-77
Running the program	10-78
Script Commands	10-79
Script File	10-84

ACTIVE X COMPONENT REFERENCE	11-1
Introduction	11-3
Requirements	11-3
Installation of the ActiveX Component	11-3
Using the Component	11-3
Connection Commands	11-4
Properties	11-7
Motion Commands	11-8
Process Control Commands	11-17
Variable Commands	11-18
Input / Output Commands	11-21
General commands	11-27
Events	11-29
TrioPC status	11-30
REFERENCE	1-1
ATYPE	1-3
AXISSTATUS / ERRORMASK	1-4
CONTROL	1-5
Communications Ports	1-5
MTYPE	1-6
Data Formats and Floating-Point Operations	1-7
Single-Precision Floating Point Format	1-7
Product Codes	1-8